


MUTH

MIRROR SYSTEMS


SIGNAL MIRROR INSTALLATION INSTRUCTIONS

Installation Kit Part Number: 200-0022-H (Heated)


200-0022-0 (Non Heated)

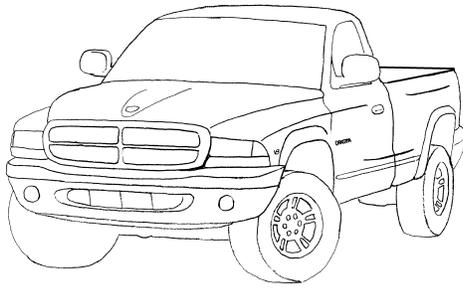


1997 - 2000 Dodge Dakota
6 X 9 mirror style only

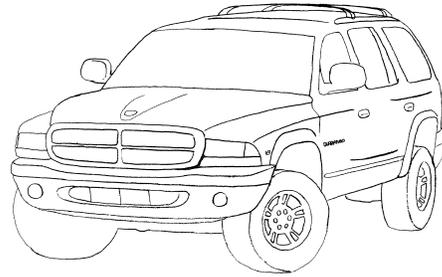

1998 - 2000 Dodge Durango
6 X 9 mirror style only

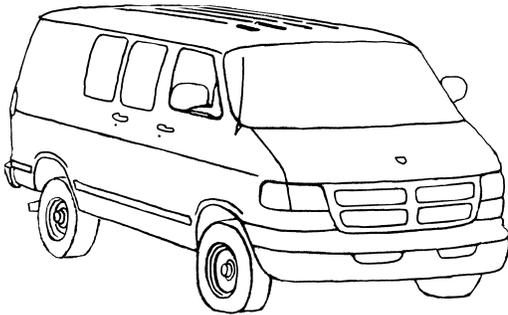


1998 - 2002 Dodge Ram Van
6 X 9 mirror style only

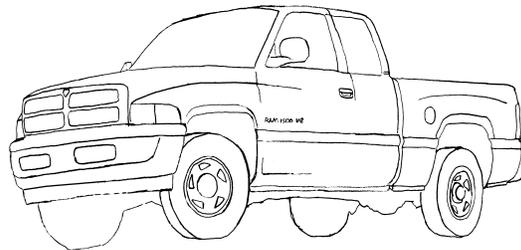


1998 - 2001 Dodge Ram Pickup
1997 - 2001 Dodge Ram Pickup (fold-away)
6 X 9 mirror style only

REQUIRED ITEMS

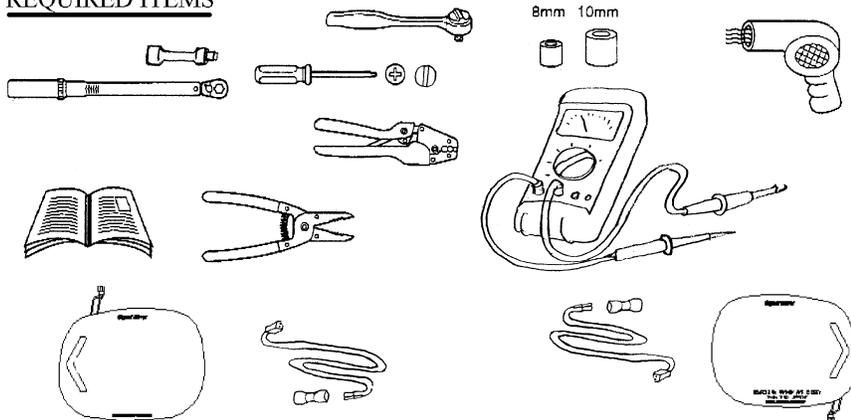

Instructions part number:
210-0005-0 Rev B, 2/20/2002

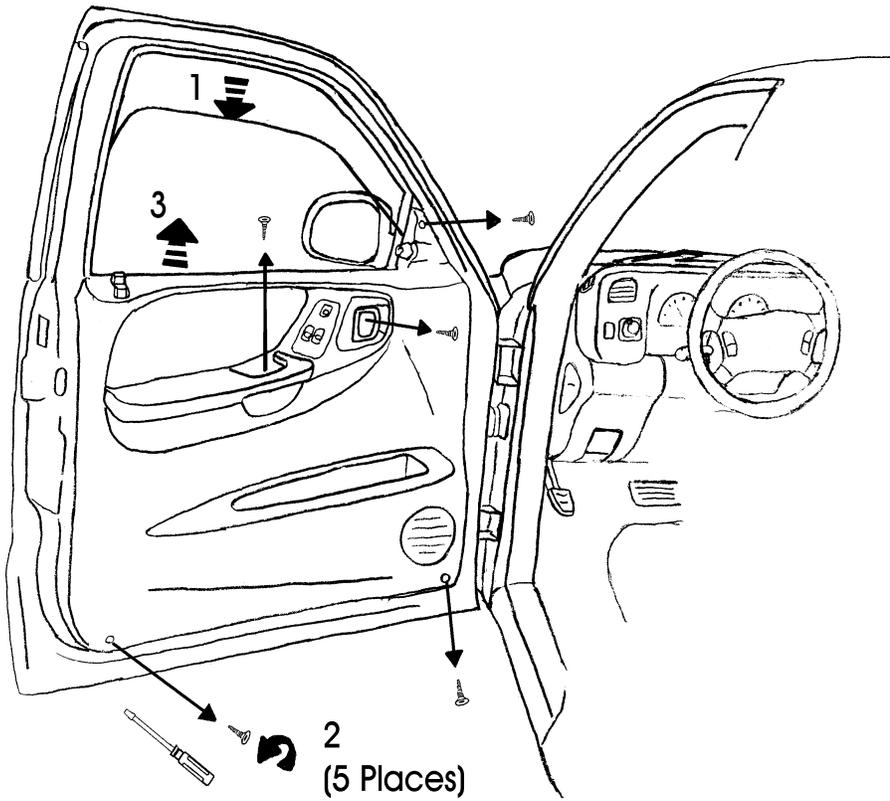

Procedure A1
Dakota/Durango
 (See A2 for Ram Van
 and A3 for Ram Pickup)


Door Panel Removal:

- 1) Lower window.
- 2) Remove 5 screws holding door panel in place.
- 3) Gently raise door panel to expose door wiring.

Procedure B1
Dakota/Durango
 (See B2 for Ram Van
 and B3 for Ram Pickup)

Mirror Housing Removal:

- 1) Unplug the connections for the mirror, door lock, and window control wires.
- 2) Remove door panel.
- 3) While securing mirror with one hand, and being sure not to drop components into the door, remove 3 nuts holding mirror to door.
- 4) Remove mirror from door.

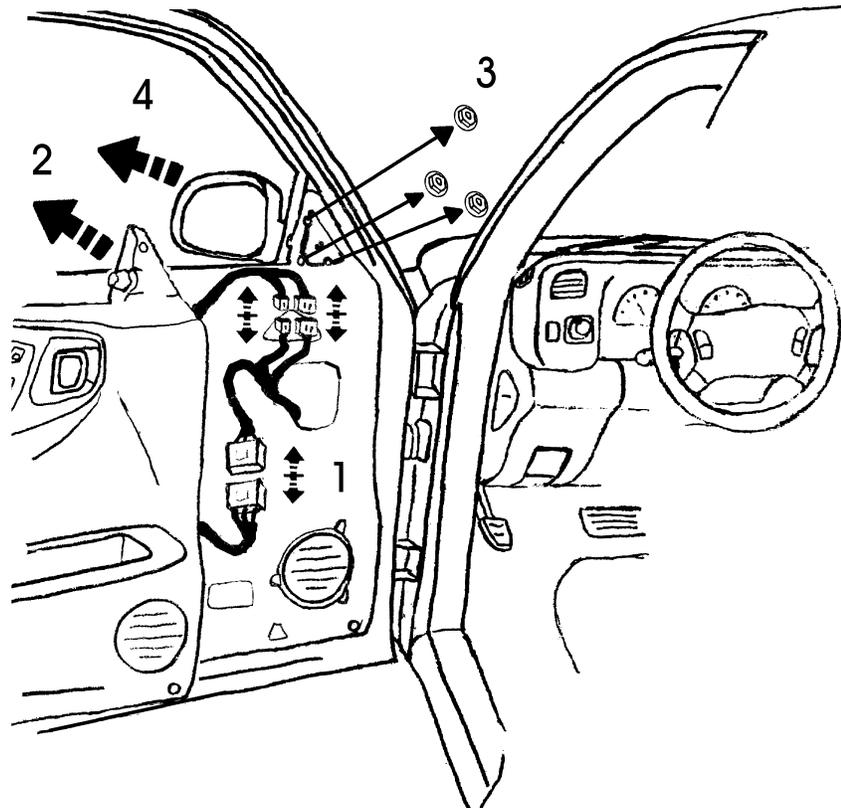

Procedure A2

Ram Van

Door Panel Removal:

- 1) Lower window.
- 2) Remove 8 screws holding door panel in place.

Procedure B2

Ram Van

Mirror Housing Removal:

- 1) Remove window/lock/mirror control module.
- 2) Pry around the bottom of the door panel with a small pry bar or door panel removal tool in order to unsnap and remove door panel.
- 3) Unplug the harness that runs from the mirror to the control module.
- 4) While securing mirror with one hand, and being sure not to drop components into the door, remove 3 nuts holding mirror to door.
- 5) Remove mirror from door.